

# Fox Thermal Instruments, Inc.

**THERMAL MASS FLOW METER & TEMPERATURE TRANSMITTER**



***Model FT3  
Data Logger***

**FOX**  
THERMAL INSTRUMENTS, INC.

## Notice

*This publication must be read in its entirety before performing any operation. Failure to understand and follow these instructions could result in serious personal injury and/or damage to the equipment. Should this equipment require repair or adjustment beyond the procedures given herein, contact the factory at:*

**FOX THERMAL INSTRUMENTS, INC.**

**399 RESERVATION ROAD**

**MARINA, CA 93933**

**TELEPHONE: 831-384-4300**

**FAX: 831-337-5787**

**EMAIL: SERVICE@FOXTHERMALINSTRUMENTS.COM**

**Download Technical Data Sheets from our website:**

**[www.foxthermalinstruments.com](http://www.foxthermalinstruments.com)**

**Fox Thermal Instruments believes that the information provided herein is accurate however be advised that the information contained herein is NOT a guarantee for satisfactory results. Specifically, this information is neither a warranty nor guarantee, expressed or implied, regarding performance; merchantability; fitness; or any other matter with respect to the products; nor recommendation for the use of the product/process information in conflict with any patent. Please note that Fox Thermal Instruments, Inc. reserves the right to change and/or improve the product design and specification without notice.**



**Fox FT3 Manuals:**

- **Model FT3 Instruction Manual**
- **Fox FT3 RS485 Modbus Manual**
- **Calibration Validation User's Guide**
- **Fox FT3 HART Manual**

# Table Of Contents

1. Introduction	Page 4
2. Menu Trees	Page 5
3. Setup	Page 8
4. Operation	Page 9
a. Configure	Page 9
b. MODBUS Data Log Support	Page 14
5. Glossary of Terms and Abbreviations	Page 16
6. Index	Page 17

## Firmware/Software Revision Compatibility Record |

Manual Revision	FT3 Firmware Version
Rev A	v 3.08 and earlier
Rev B	v 3.09 and later

## Introduction

### Introduction

#### **Introduction**

Thank you for purchasing the Model FT3 Thermal Gas Mass Flow Meter and Temperature Transmitter from Fox Thermal Instruments. The Model FT3 is one of the most technically advanced flow meters in the world. Extensive engineering effort has been invested to deliver advanced features, accurate measurement performance, and outstanding reliability.

The Model FT3 offers an option to have a data logger mounted on the Front Panel board that can be used to record FT3 data. Data that may be recorded includes interval totals (i.e. a previous 24-hour total) based on selected flow units (i.e. total mass flow or total volumetric flow). This data may be recorded at a rate specified by the customer ranging from 1 second to 1 month in hour/minute/second intervals.

This Manual contains the operation instructions for the FT3 Data Logger. The FT3 Data Logger supports 31 records with a start/synch time of midnight set as a default. When the number of samples exceeds 31, the old data will be overwritten. Only the most recent 31 records are kept.

#### **Scope**

This document describes the operation and configuration of the FT3 data logger along with the Modbus commands to support it. It is divided into the following sections: Introduction, Menu Trees, Setup, Operation, Glossary and Index.

#### **Model FT3 Data Logger Features**

The following features are included in the Data Logger option available on the Fox Model FT3 Thermal Gas Mass Flow Meter & Temperature Transmitter:

- 31 separate 24-hour daily totals with date and time stamp
- Data can be accessed over RS485 Modbus and the Engineering Display
- After 31 days, old data will be written over; however, the most recent 31 daily totals will always be available
- The operator may set the start time through the front panel (the default start time for the 24-hour total will be midnight)
- Operator may set the local time through the front panel
- Field retrofits with Data Loggers require exchanging the existing display board for the display board with the data logger feature and upgrading the main FT3 board firmware (upgrade kit available)


# Menu Trees

## Menu Trees

### Operation Using Front Panel

When using the Model FT3's front panel to access the Data Logger functions, follow the path illustrated in the Menu Trees shown in Figures 2.1 - 2.3.

Fig. 2.1: Accessing Data Logger Functions from the Front Panel

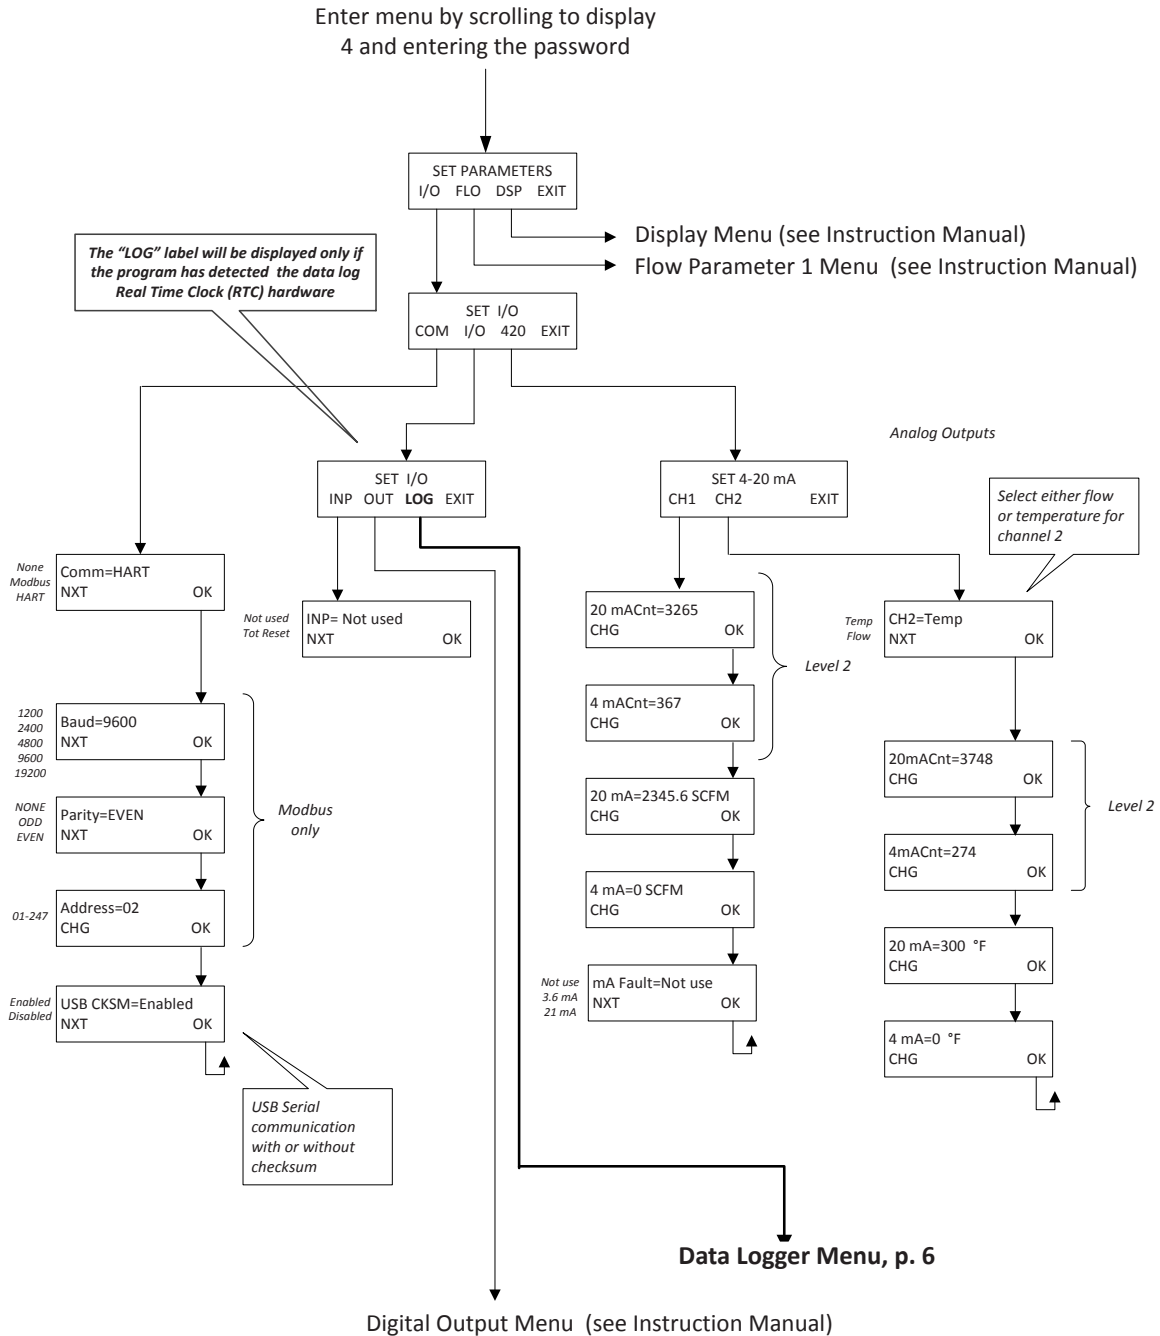


# Menu Trees

## Data Logger Settings

### Data Logger Settings

The settings of the FT3 Data Logger can be accessed from the front panel of the meter. The menu tree below shows the settings that may be accessed.

Fig. 2.2: Setting the FT3 Data Logger from the Front Panel

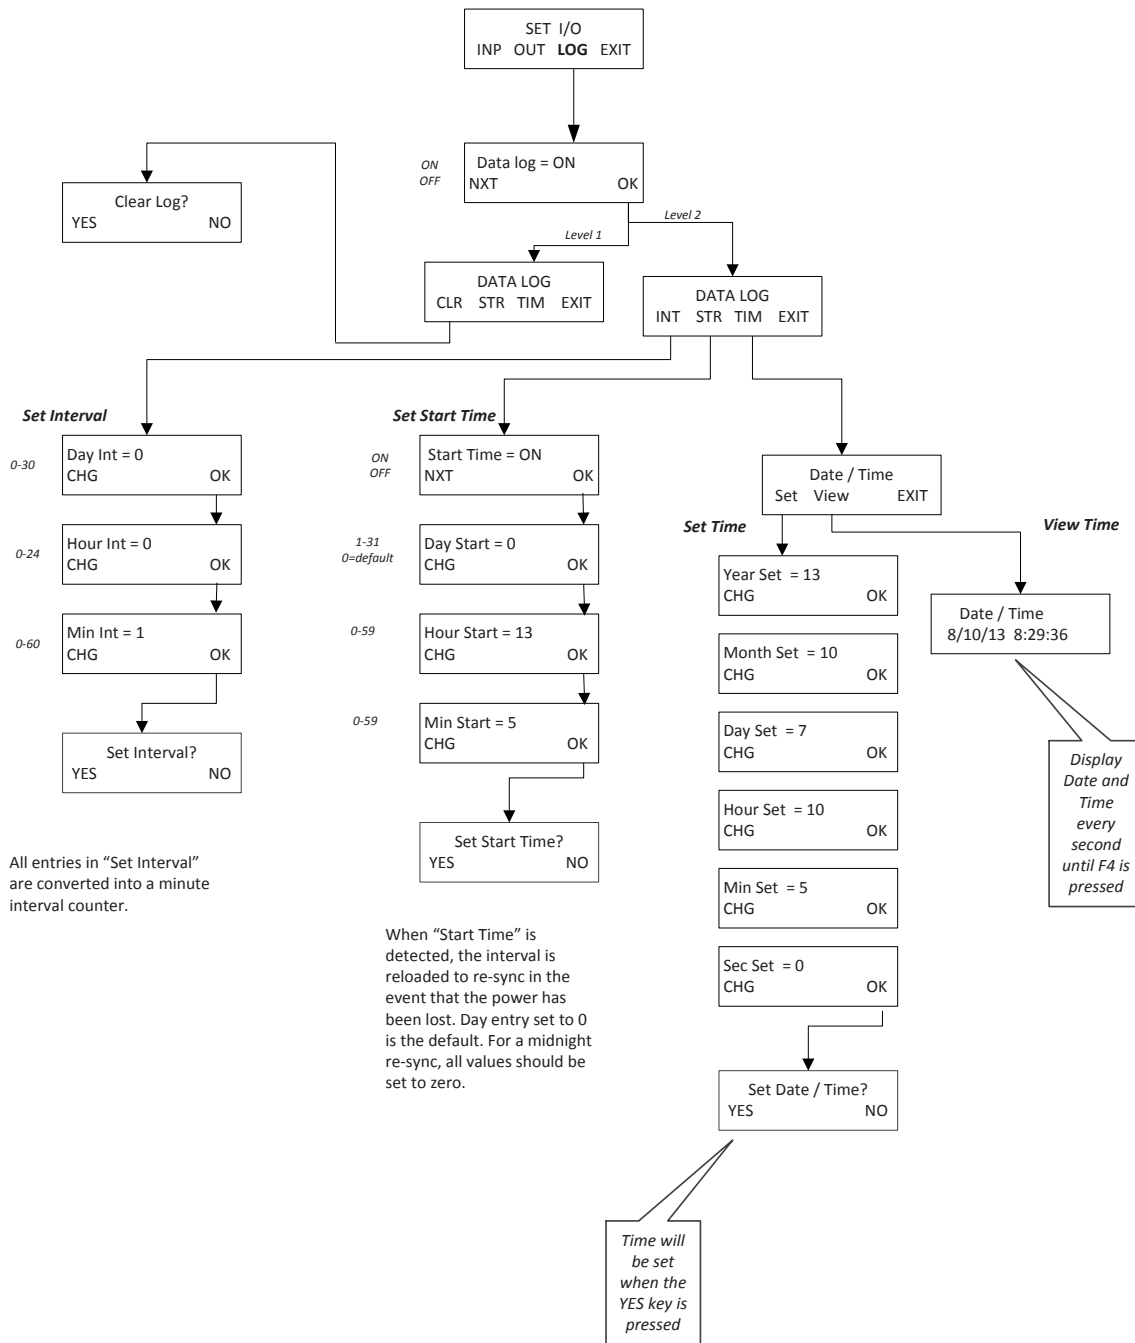

MENU TREES


# Menu Trees

## Data Logger Display

### Data Logger Display

Displaying the records from your FT3 Data Logger is quick and easy. Use the short cuts displayed in the menu tree below to view data logger records quickly and easily from the front panel of the meter.

Fig. 2.3: Viewing the FT3 Data Logger Records from the Front Panel

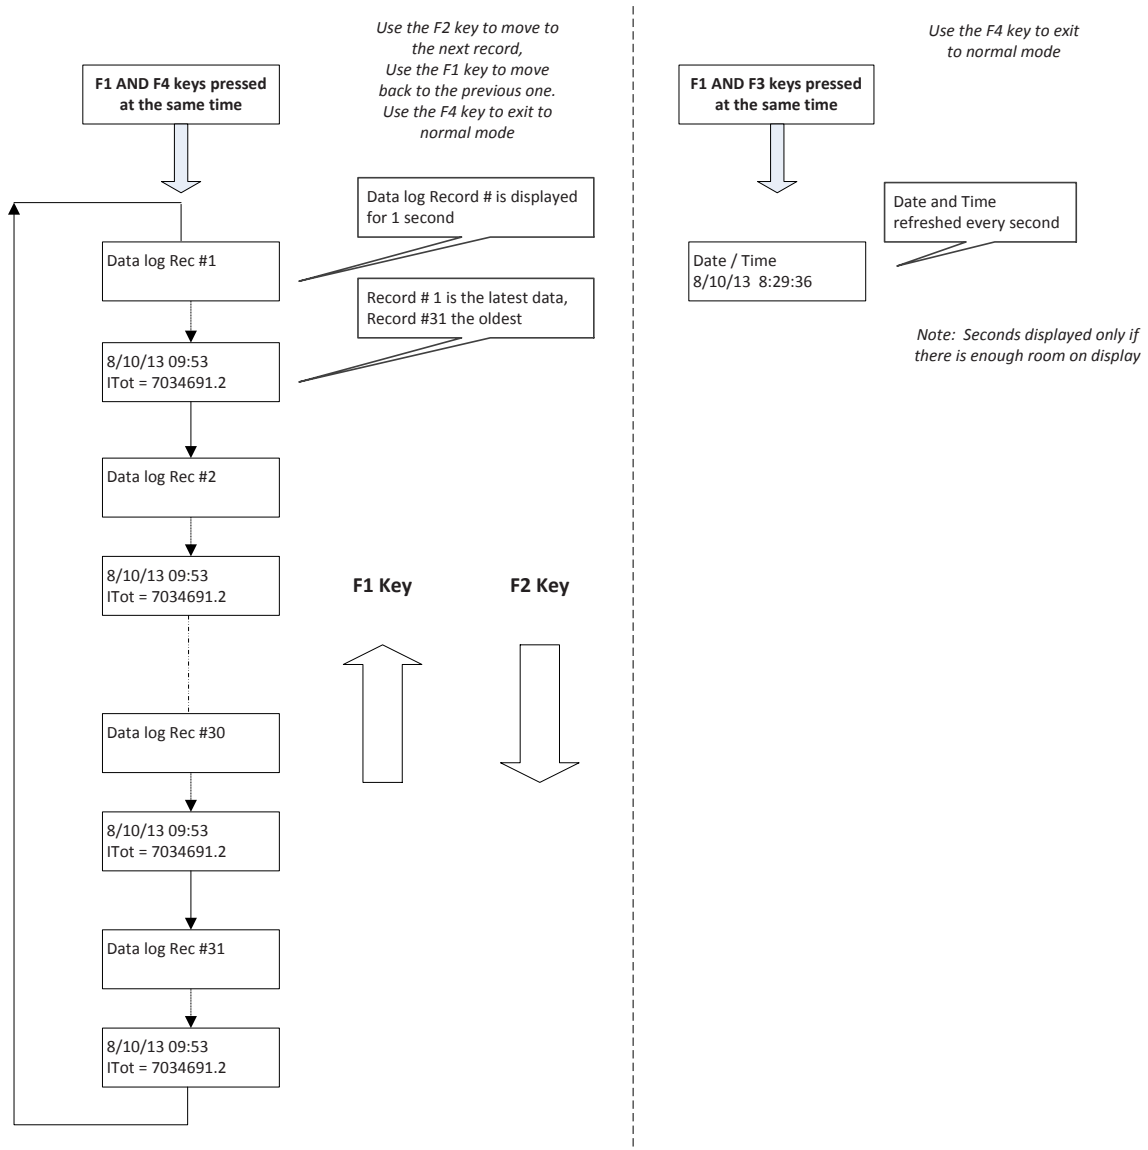

## Setup

## Setup Menu

**Setup Menu**

Using the keypad on the front panel, enter the programming mode:

SET PARAMETERS			
I/O	FLO	DSP	EXIT

F1	F2	F3	F4
----	----	----	----

Press **F1** for **(I/O)**. The screen will show:

SET I/O			
COM	I/O	420	EXIT

F1	F2	F3	F4
----	----	----	----

Press **F2** for **(I/O)**. The screen will show:

SET I/O			
INP	OUT	LOG	EXIT

F1	F2	F3	F4
----	----	----	----

Note: If the hardware does not detect a real time clock, the **LOG** menu key will not be displayed.

Press **F3** for **(LOG)**. The screen will show:

Data log = ON	
NXT	OK

F1	F2	F3	F4
----	----	----	----

The default is set with the data logger enabled, press **F1 (NXT)** to turn the data logger ON or OFF (the default is ON).

Press **F4 (OK)** to continue.

DATA LOG			
CLR	STR	TIM	EXIT

F1	F2	F3	F4
----	----	----	----






## Operation: Configure


### Clearing the Data Log

#### Clearing the Data Log

From the data log menu, press **F1 (CLR)**.

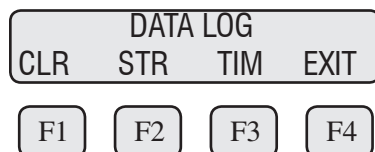

The screen will show:

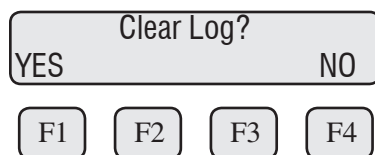

Press **F1 (YES)** to confirm or **F4 (NO)** to cancel.

### Setting the Start / Sync Time


#### Setting the Start/Sync Time

The start/sync time is used to start or syncing a data log sample. When a match is detected between the real time clock and the start/sync time, the interval is reloaded. The Data Logger will be set to the default of zero (midnight) and only the hour, minute, and second will be used for the trigger.

For example:

A setting of "day=00, hour=00, minute=00" will reload the interval every day at midnight.

From the data log menu, press **F2 (STR)**. The screen will show:

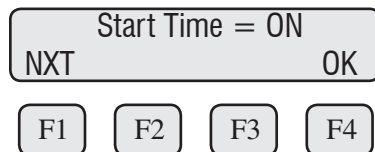

Press **F1 (NXT)** to turn ON or OFF the Start/Sync Time and then press **F4 (OK)**:

## Operation: Configure

Setting the Start /  
Sync Time

Day Start = 0  
CHG OK

F1 F2 F3 F4

Press **F4 (OK)**.

Hour Start = 0  
CHG OK

F1 F2 F3 F4

Set the Hour for which you want to start/sync time. When the Hour Start is set to zero, the default will be for midnight. **Press F4 (OK)**.

Min Start = 0  
CHG OK

F1 F2 F3 F4

Set the Minute for which you want to start/sync time. Press **F4 (OK)**.

Set Start Time?  
YES OK

F1 F2 F3 F4

Press **F1 (YES)** to set the start/synch time for Day:Hour:Minute.

Note: Make sure that the specified time has not been reached yet.

### Setting the Real Time Clock

From the Data Log menu, press **F3 (TIM)**. The screen will show:

Date/Time  
SET VIEW EXIT

F1 F2 F3 F4



Setting the Real  
Time Clock

## Operation: Configure

### Setting the Real Time Clock

Press **F1 (SET)**:

Year Set = 13  
CHG OK

F1 F2 F3 F4

Press **F1 (CHG)** to change the years, **F4 (OK)** to continue.

Month Set = 10  
CHG OK

F1 F2 F3 F4

Press **F1 (CHG)** to change the month, **F4 (OK)** to continue.

Day Set = 28  
CHG OK

F1 F2 F3 F4

Press **F1 (CHG)** to change the day/date, **F4 (OK)** to continue.

Hour Set = 13  
CHG OK

F1 F2 F3 F4

Press **F1 (CHG)** to change the hours, **F4 (OK)** to continue.

Min Set = 45  
CHG OK

F1 F2 F3 F4

Press **F1 (CHG)** to change the minutes, **F4 (OK)** to continue.

## Operation: Configure

Setting the Real  
Time Clock

Sec Set = 55  
CHG OK

F1 F2 F3 F4

Press **F1 (CHG)** to change the seconds, **F4 (OK)** to continue.

Sec Date/Time  
YES NO

F1 F2 F3 F4

Press **F1 (YES)** to set the Date & Time.

Note: All real time clocks on FT3 data loggers are set to a default of California's Pacific Standard Time. To sync the real time clock to your local time exactly, set the time slightly ahead of your local, current time and wait for the current time to reach the set value before pressing the **F1 (YES)** key to set the time.



View the Real Time  
Clock

### Viewing the Real Time Clock

From the Data Log Menu, Press **F3 (View)** or press **F1** and **F3** at the same time from the regular mode.

Date/Time  
10/28/13 13:45:55

F1 F2 F3 F4

The current real time is displayed on line 2 and is updated every second. Press **F4** to exit.

Note: The seconds will only be displayed if there is enough room available to do so.

Note: Time is displayed in military time.




## Operation: Configure

### Displaying Data Log Records

#### Displaying Data Log Records


The data logger supports 31 records, record #1 being the latest recorded value and 31 being the oldest.

From the normal operating mode, press F1 & F4 keys at the same time:

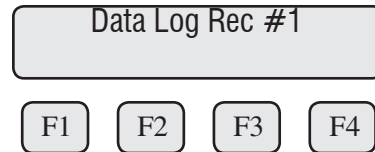

Note: Record #1 is the most recent interval total, record #31 is the oldest.

This display screen will appear for only 1 second and will then show:

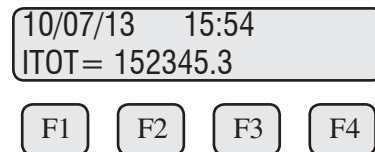

The Date & Time is displayed on line 1 and the interval total on line 2. The interval total is based on the flow units selected in the meter (total mass flow or total volumetric flow).

Pressing **F2** will display the next record, **F1** will display the previous record.

Press **F4** to exit to the normal mode at any time.

## Operation: MODBUS Data Log Support

### Select Record

#### Select Record (command 06, Preset Register, Modbus Address 40214)

This command is used to select the next record that is going to be read from the data log buffer using command 03

Address register = 40214

Data = xx. (xx = record select (hex 0-1e, decimal 0-30))

Note: Record 0 is the latest and 30 is the oldest.

Request:

<Meter Address> <Function code=06> <Register address high=0x00>  
<Register address low=0xd5>  
<Register data high=0x00> <Register data low =0xx> <CRC high>  
<CRC low>

Response:

<Meter Address> <Function code=06> <Register address =0x00>  
<Register address =0xd5>  
<Register data=0x00> <Register data =0xx> <CRC high> <CRC low>

### Read Record

#### Read Record (command 03, Read Holding register)

These registers are used to get the data for a single record. Before issuing that command, a preset command has to be sent to select the record to be read.

Register Address	Modbus Address	Data Type	Comment
0xc7	40200	Record Number (16 bits integer)	Record Number
0xc8	40201	Year /Month(16 bits integer, BCD format yyyy mmmm)	Record Year/Month
0xc9	40202	Day/Hour (16 bits integer, BCD format dddd hhhh)	Record Day/Hour
0xca	40203	Minute/Second (16 bits integer, BCD format mmmm 0000)	Record Minute/sec=0
0xcb	40204	Data Index (16 bits integer, 0x00FA))	Data Index = 250
0xcc	40205	Interval Total (16 bits unsigned integer, high register)	Interval Total (int)
0xcd	40206	Interval Total (16 bits unsigned integer, low register)	Interval Total (int)
0xce	40207	Interval Total (float upper 16 bits)	Interval Total (float)
0xcf	40208	Interval Total (float lower 16 bits)	Interval Total (float)

Note: The Record Number is an unsigned integer (0-65535) that is incremented every time a new record is stored and is not the same as the request record number (0-30).



## Operation: MODBUS Data Log Support

### Read Record

Example:  
Request:

Request data register at starting address 40200 and specifying 9 register to read the complete record

```
<0x01> <0x03> <0x00> <0xc7> <0x00> <0x09> <0x34>
<0x31>
```

Response:

```
<0x01> <0x03> <0x12> <rec nb> <rec nb> <year> <month> <da
y> <hour> <min> <sec> <data index> <data index> <total val int> <total
val int> <total val int> <total val int> <total val fp> <total val fp> <total val
fp> <total val fp> <CRC high> <CRC low>
```

### Clear Data Log

#### **Clear Data Log (command 06, Preset Register, Modbus Address 40213)**

This command is used to clear all records in the log.

Address register = 40213

Data = 0x57.

Request:

```
<Meter Address> <Function code=06> <Register address high=0x00>
<Register address low=0xd4>
<Register data high=0x00> <Register data low =0x57> <CRC high>
<CRC low>
```

Response:

```
<Meter Address> <Function code=06> <Register address =0x00>
<Register address =0xd4>
<Register data=0x00> <Register data =0x57> <CRC high> <CRC low>
```

## Definitions

Glossary of Terms  
and Definitions



COM	Communication
CSV	Current Sense Voltage
DMM	Digital Multimeter
ITOT	Interval Total: Total flow for the interval selected (based on flow units selected to measure flow in meter), total mass flow or total volumetric flow
mA	Milliamps
PC	Personal Computer
RTC	Real Time Clock



# Index

## Index

- Configure (Front Panel), p. 9
  - Clearing Data Log, p. 9
  - Display Data Log Records, p. 13
  - Set Real Time Clock, p. 10
  - Start/Sync Time, p. 9
  - View Real Time Clock, p. 12
- Configure (MODBUS), p. 14
  - Clear Log, p. 15
  - Read Record, p. 14
  - Select Record, p. 14
- Glossary, p. 16
- Introduction, p. 4



**Information**



**Caution**



**Definition of Terms**